

BATCH FEED ACCESSORY KIT (BFAK)

⚠ WARNING

Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

⚠ CAUTION

Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.

- If you are replacing an existing disposer, begin with Step 1.
- If this is a first-time installation, begin with Step 2.


STEP 1 – Remove disposer from sink

⚠ WARNING

ELECTRICAL SHOCK

Turn off electrical power at fuse box or circuit breaker before servicing.

1. Turn off electrical power at fuse box or circuit breaker.
2. Disconnect drain trap from disposer waste discharge pipe with adjustable pliers (Figure A). Also disconnect dishwasher drain connection, if applicable.

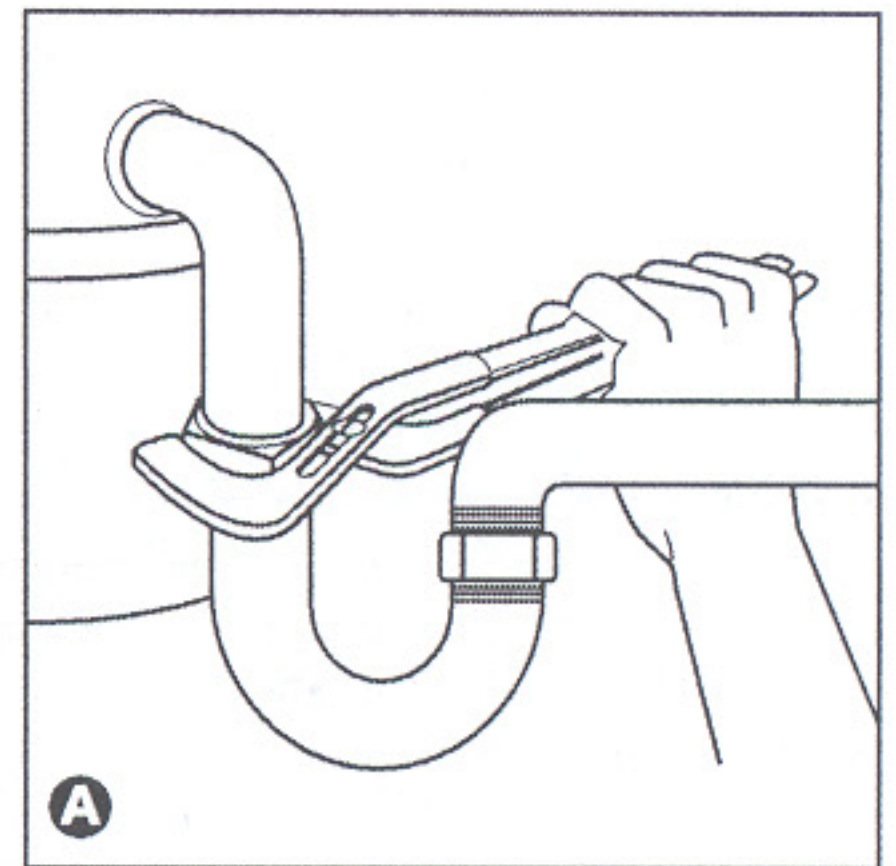


⚠ WARNING

PERSONAL INJURY

Do not position your head or body under disposer; unit could fall during removal or installation.


3. Support disposer with one hand and insert end of wrenchette or screwdriver into right side of one mounting lug on lower mounting ring (Figure B). Lift disposer slightly and loosen lower mounting ring by pushing or pulling wrenchette or screwdriver to left until disposer is free from mounting assembly.

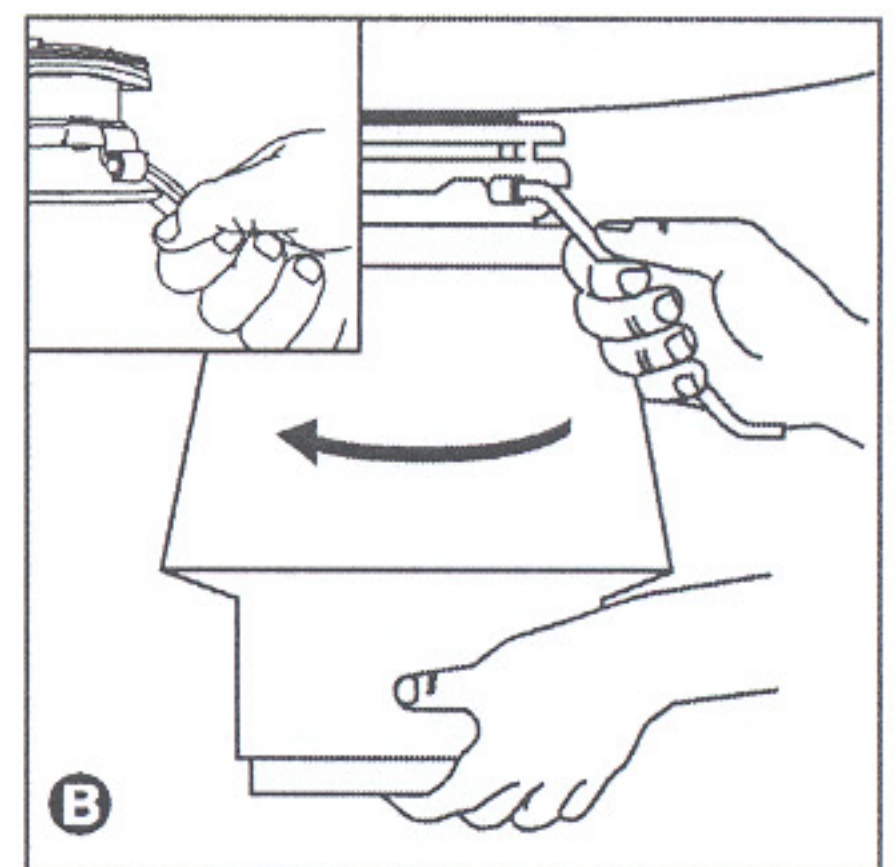

IMPORTANT: Disposer may be heavy – provide support.

STEP 2 – Verify Magnetic Claw Installation

1. Install magnetic claw onto two of the three mounting screws of the mounting assembly (Figure C). If the claw cannot be installed, go to Step 2-2; if the claw installs properly, remove it and go to Step 2-8.
2. Remove three mounting screws, pry off snap ring with screwdriver, and remove old pressure plate. Discard mounting screws and pressure plate. Retain snap ring.
3. Install the three mounting screws (provided) into sink flange.
4. Install supplied pressure plate over sink flange.
5. Holding pressure plate in place, slip mounting ring over sink flange so it seats against pressure plate.
6. With the pressure plate and mounting ring tight to sink bottom, slide the snap ring on to sink flange until it pops into groove on flange.
7. Tighten three mounting screws up to sink until mounting assembly is seated tightly and evenly against sink.
8. Remove and discard rubber mounting gasket and replace with newly supplied rubber gasket.

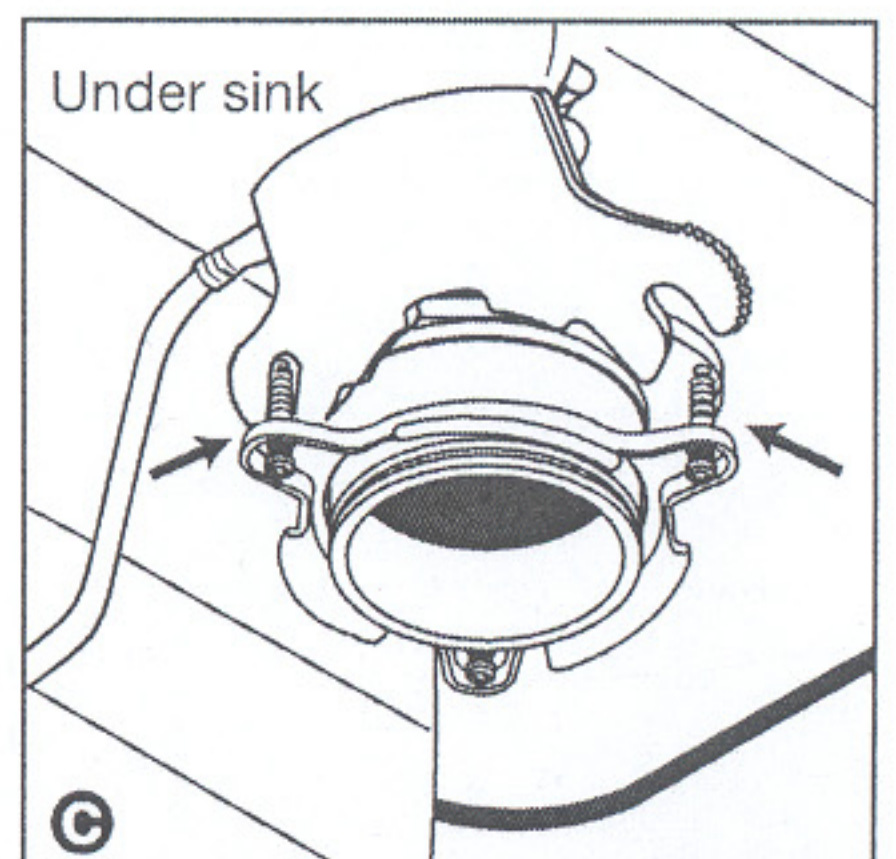

IMPORTANT: Required to ensure proper seal of stopper.

Instructions continued on reverse.

VIKING




BATCH FEED ACCESSORY KIT (BFAK) - continued

STEP 3 – Installing Magnetic Batch Feed Switch

1. With electrical supply turned off, turn disposer upside down and remove electrical cover plate (Figure D). Discard cover, retain mounting screw.
2. Reach inside unit and pull out electrical leads (wires). You will find two black wires connected together and either two white wires or a white and black wire connected together. Locate and identify the TWO BLACK leads. (Figure E)

IMPORTANT: The magnetic batch feed switch should be connected to the two black leads.

3. Disconnect the two black leads identified in Step 3-2. Strip the black leads approximately 3/8".
 4. Locate and identify the black and red leads at the end of the magnetic batch feed switch cable. Splice one of the disposer's black leads to the black lead on the end of the magnetic switch cable. Splice the disposer's other black lead to the red lead of the magnetic switch cable. (Figure F)
- IMPORTANT: Use proper size wire nuts when splicing the leads.**
5. Insulate wire connections with electrical tape, and push connections into disposer housing without displacing cardboard insulation shield.
 6. Install electrical cover attached to the magnetic switch cable, using original mounting screw.

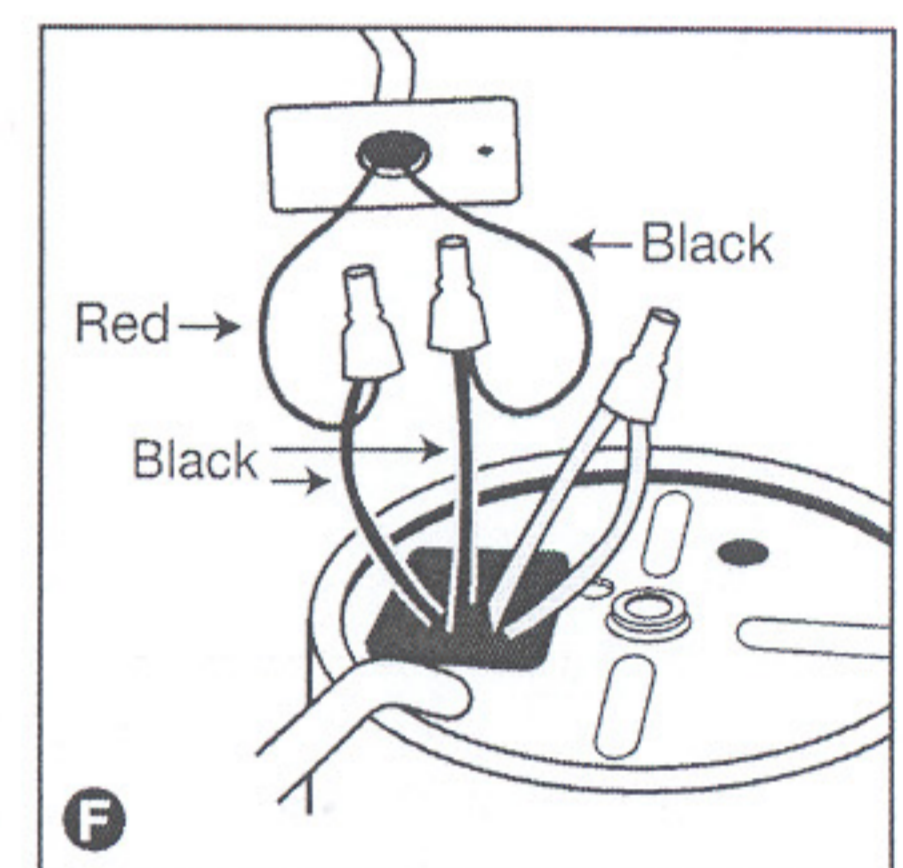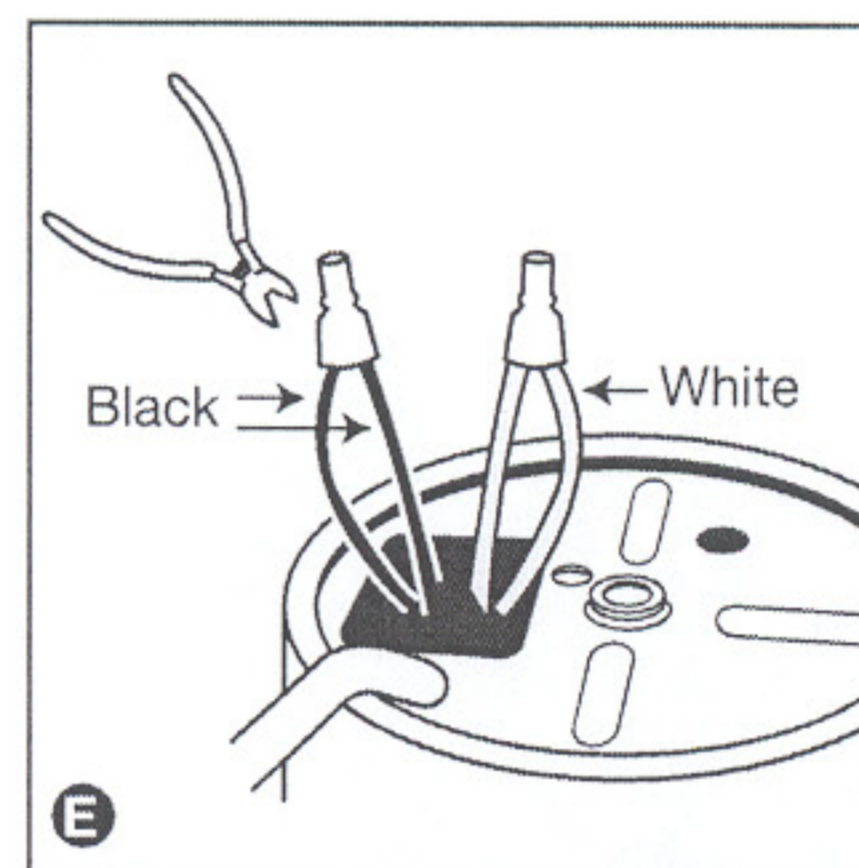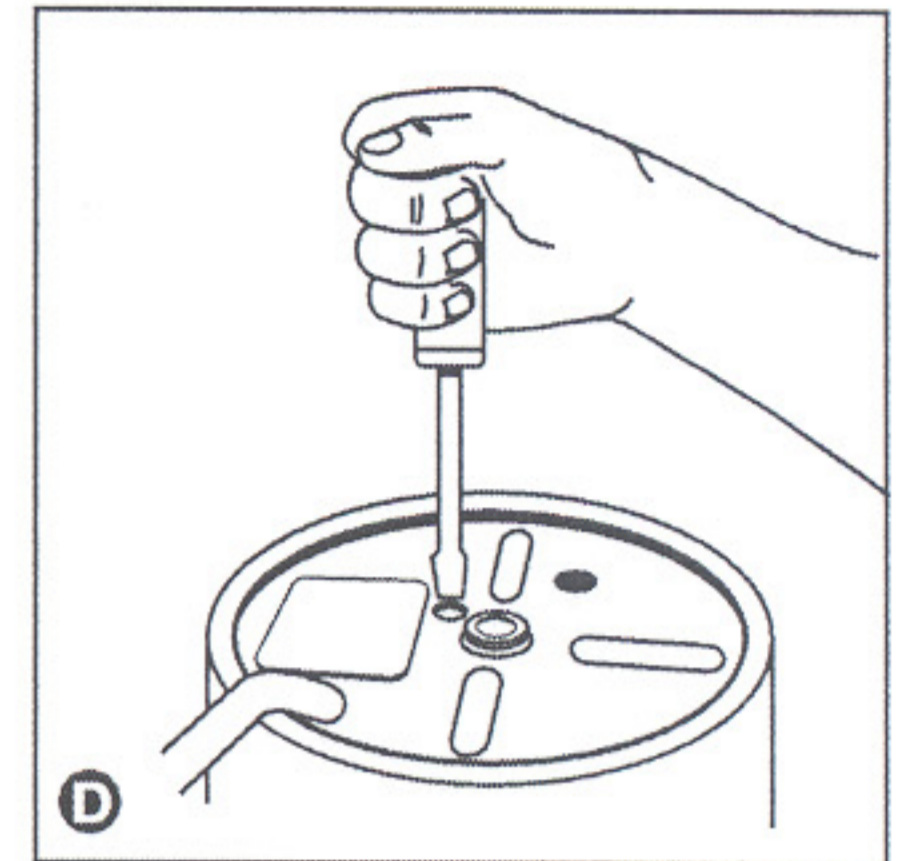

STEP 4 – Re-install disposer and attach Magnetic Batch Feed Switch

⚠ WARNING





PERSONAL INJURY

Do not position your head or body under disposer; unit could fall during removal or installation.

1. Position disposer with three mounting tabs (A) aligned in position to slide over mounting tracks (B). (Figure G)
2. Lift disposer, insert top end into mounting assembly, and turn lower mounting ring to right (with wrenchette or screwdriver) until mounting tabs lock over ridges (C) on mounting ring tracks (Figure H). Disposer will now hang by itself.

IMPORTANT: Make sure all three tabs are locked over ridges.

3. Re-assemble drain trap and dishwasher drain connection, if applicable.
4. Connect magnetic batch feed switch to two of the three mounting screws. (Figures I & J)
5. Route magnetic batch feed cord so that it is out of the way and affix it to trim shell with supplied clip.
6. Turn on electrical supply at fuse box or circuit breaker.

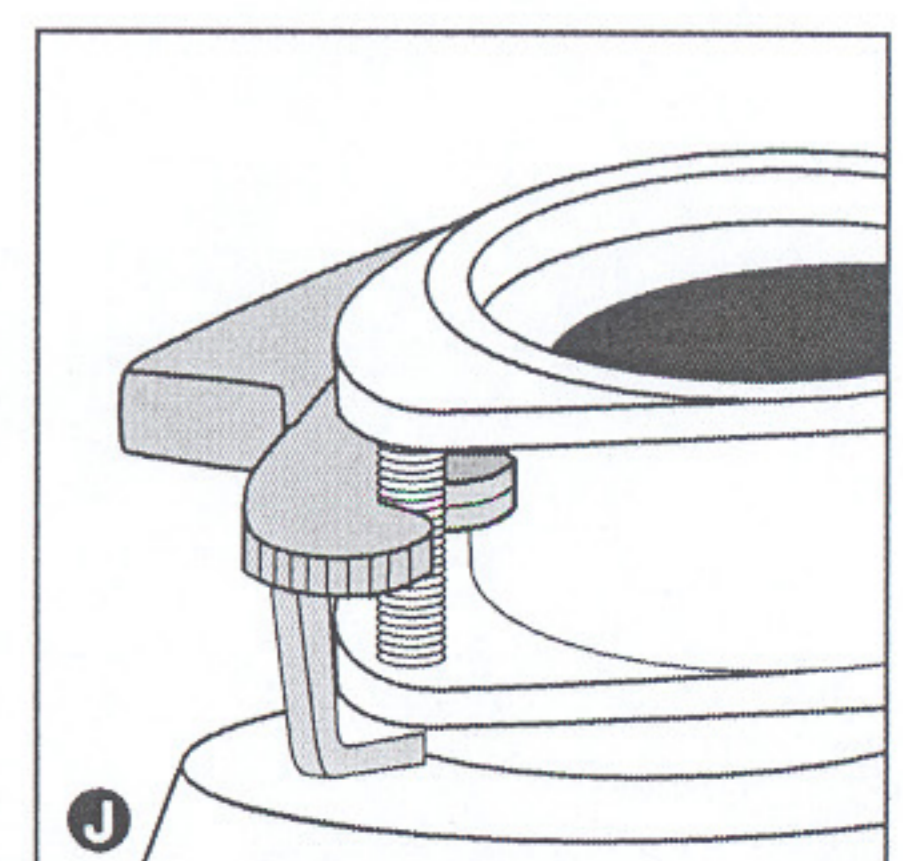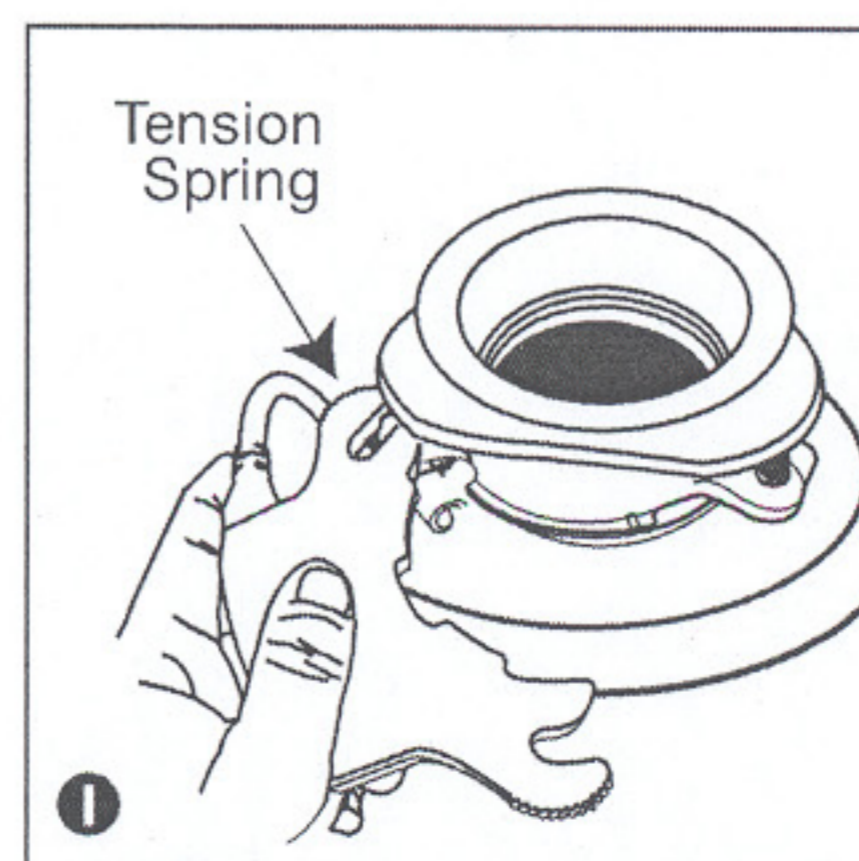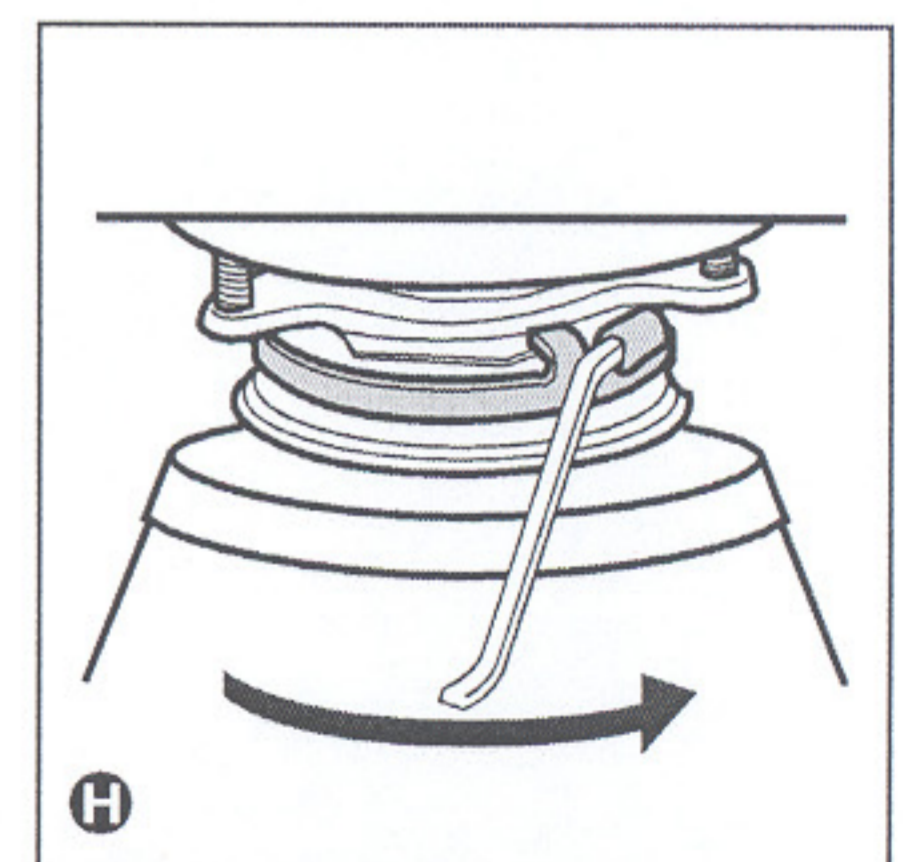
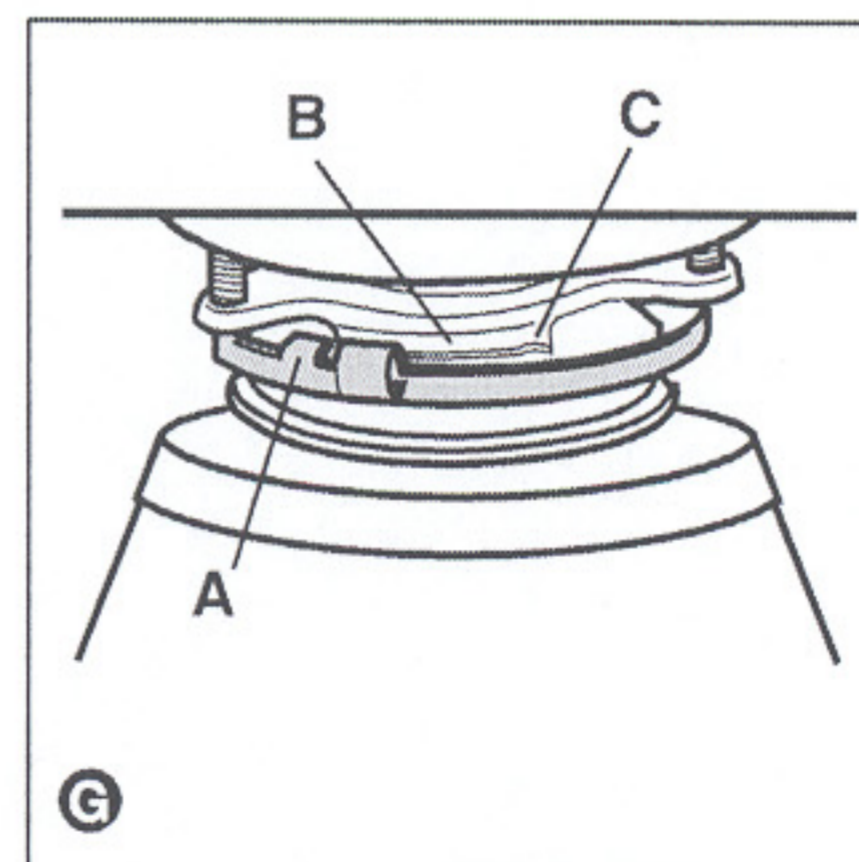


VIKING

USING THE MAGNETIC BATCH FEED

Starting the Disposer

1. To start the disposer, insert control cover (Figure A) with protruded handle facing up into the sink strainer until control cover snaps into place. (Figure B)
2. Rotate control cover either direction until disposer is activated.
3. To turn off the disposer, rotate the control cover until motor stops; remove control cover from sink strainer.

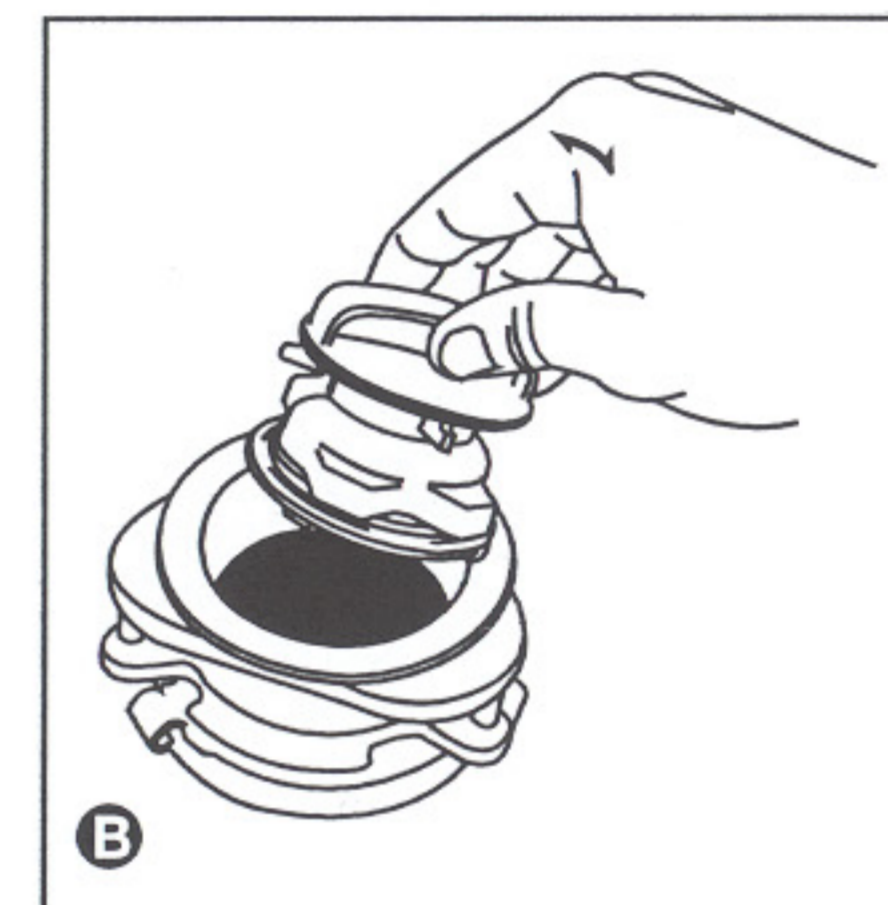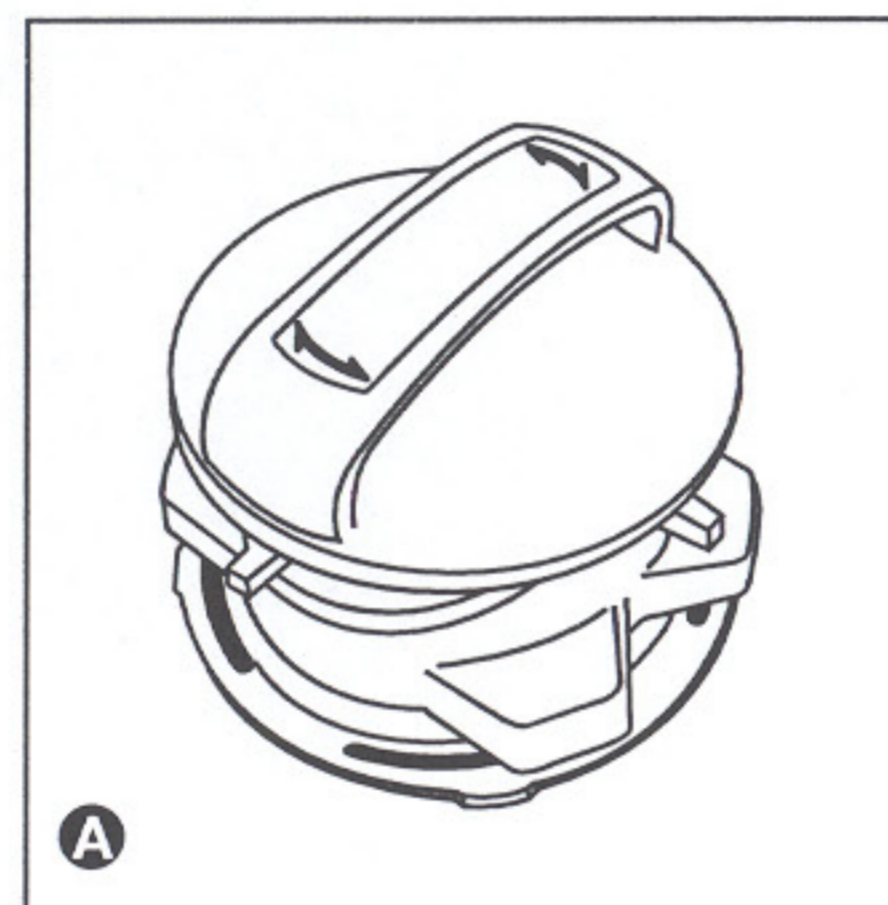

Sink Stopper

1. To use the control cover as a sink stopper, flip the control cover (Figure C) and insert into the sink strainer with the cup side facing up. (Figure D)
2. Fill sink with water.

