



POWDER OR TABLETS

- Use either powder detergent or tablets for the ultimate clean
- Separate rinse agent dispenser with level indication

PROGRAMS

- **Rinse/Hold** – Pre-rinse dishes clean
- **Fast Wash/ECO Wash** – 34 Minutes!
- **Light/China** – Less water pressure for lightly soiled or fine china
- **Normal Wash** – Normal soil level
- **Pots/Pans** – Heavy soil level
- **Pots/Pans Plus** – Extra-heavy soil level

FUNCTIONS

- **Half Load** – Energy saving function for use with partial loads
 - **Tablet Detergent** – Provides better dry performance from multi-purpose detergent tablets by turning off rinse aid
 - **Delay Start** – Allows delayed activation for ½ to 9 ½ hours
 - **Sanitize Function** – raises water temperature in final rinse to meet NSF requirements
-
- LCD screen displays remaining time until cycle completion

CLEAN AND IN CONTROL

6 Programs and 4 Functions Engineered to Conquer any Cleaning Scenario