

# Viking Installation Guide



Viking Range Corporation

111 Front Street

Greenwood, Mississippi 38930 USA

(662) 455-1200

For product information,

call 1-888-VIKING1 (845-4641)

or visit the Viking web site at

[vikingrange.com](http://vikingrange.com)

**DDHK23 Designer Handle Kit**  
For Use With DFRD Refrigerated Drawers,  
DFB Dishwashers, and DFWD171 Warming Drawers

# IMPORTANT—Please Read and Follow!

- Before beginning, please read these instructions completely and carefully.
- Use caution during assembly to minimize scratches.
- Do not remove permanently affixed labels, warnings or plates from the product. This may void the warranty.
- Please refer to the DFRD, DFB and DFWD Installation Instructions for more information on installing the door panel.
- **The installer should leave instructions with the customer who should retain for local inspector's use and future reference.**

## Installation with Wooden Full Overlay Custom Door Front

### Parts Included

Part	Quantity
Designer Handles	(1)
End Caps	(2)
#10 x 3/4" Hex Head Screws	(4)
Installation Instructions	

### Required Tools


- Electric Drill
- 3/16" (0.5 cm) Drill Bit
- 7/16" (1.1 cm) Spade or Forstner Bit (Counterbore)
- Tape Measure
- Hex Head Screw Driver
- Masking Tape and Pencil

### To Install:

1. Locate the wooden custom panel.
2. Using the illustrations on the next page, layout the handle location on the panels. It is recommended that masking tape be placed where the four holes will be drilled to help mark the hole placement and to prevent any damage to the door when drilling the holes.
3. The Designer handle will be mounted using (4) of the #10 x 3/4" Hex head screws provided. Using the 3/16" (0.5 cm) drill bit, drill completely through the door in the hole locations. Using the 7/16" (1.1 cm) bit, counter-bore four holes 1/2" (1.2 cm) deep max. on the **BACKSIDE** of the custom door panel.
4. Attach the Designer handle to the panel using (4) #10 x 3/4" screws provided.

# Handle Installation


## DFRD - REFRIGERATED DRAWER CUSTOM FRONT DIMENSIONS

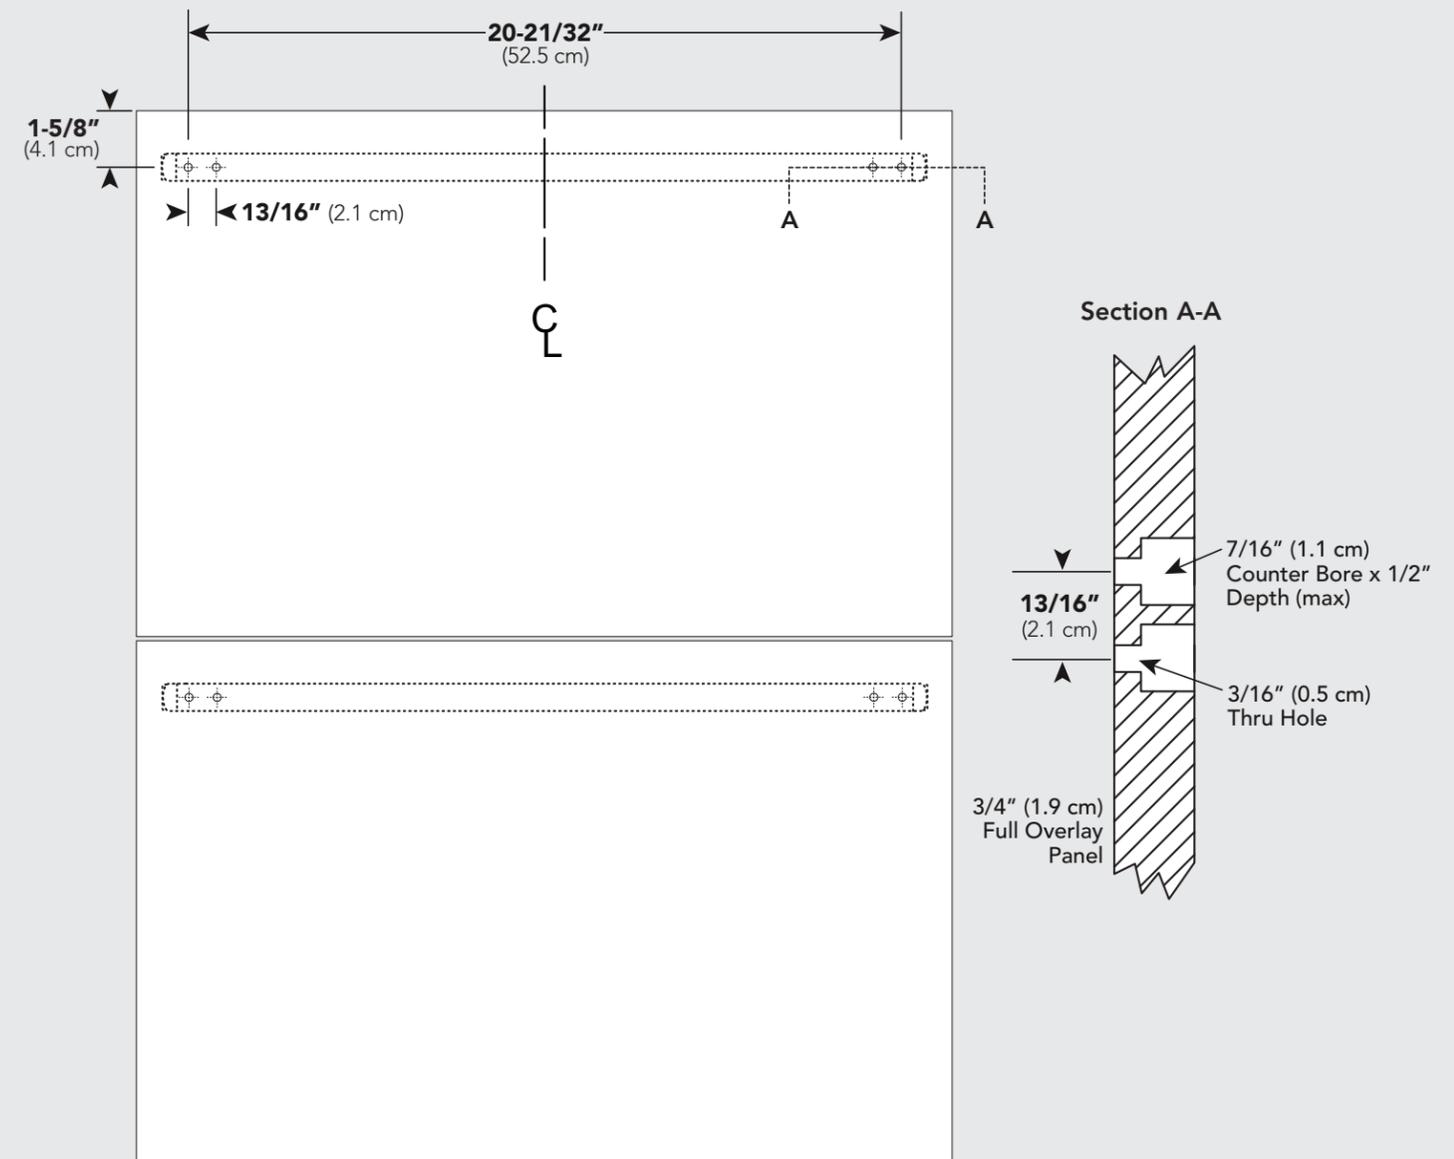

**Note:** Refrigerated drawers require two handle kits.


# Handle Installation

**DFB - DISHWASHER  
CUSTOM FRONT DIMENSIONS**

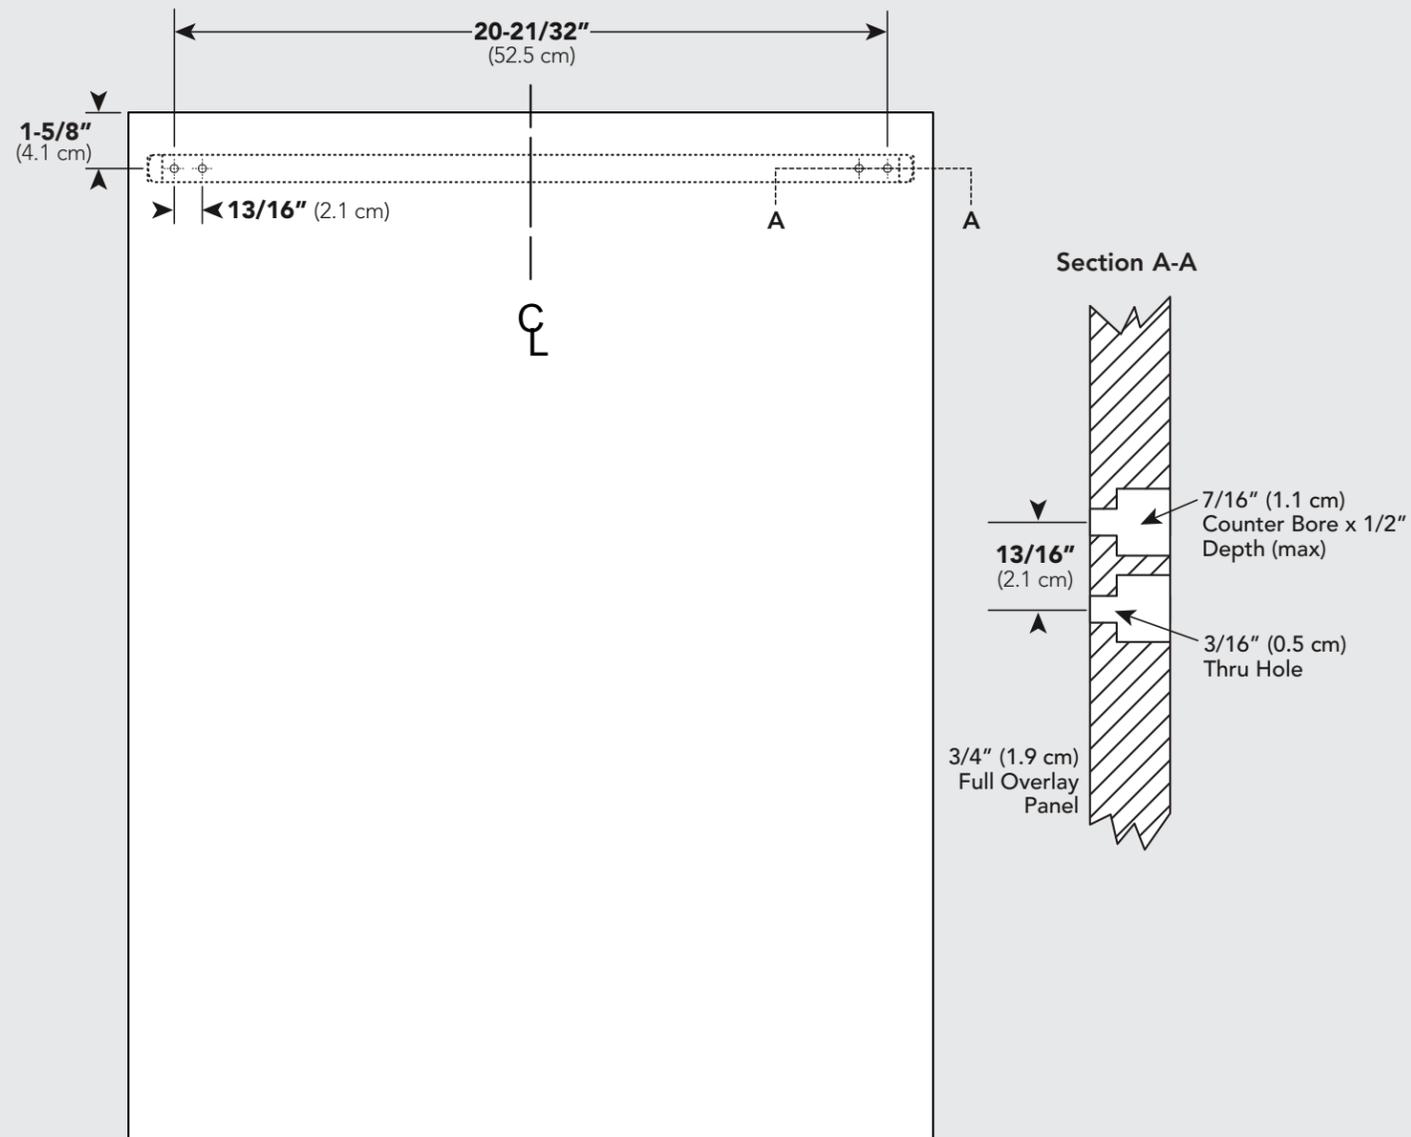

# Handle Installation


**DFWD171 - WARMING DRAWER**

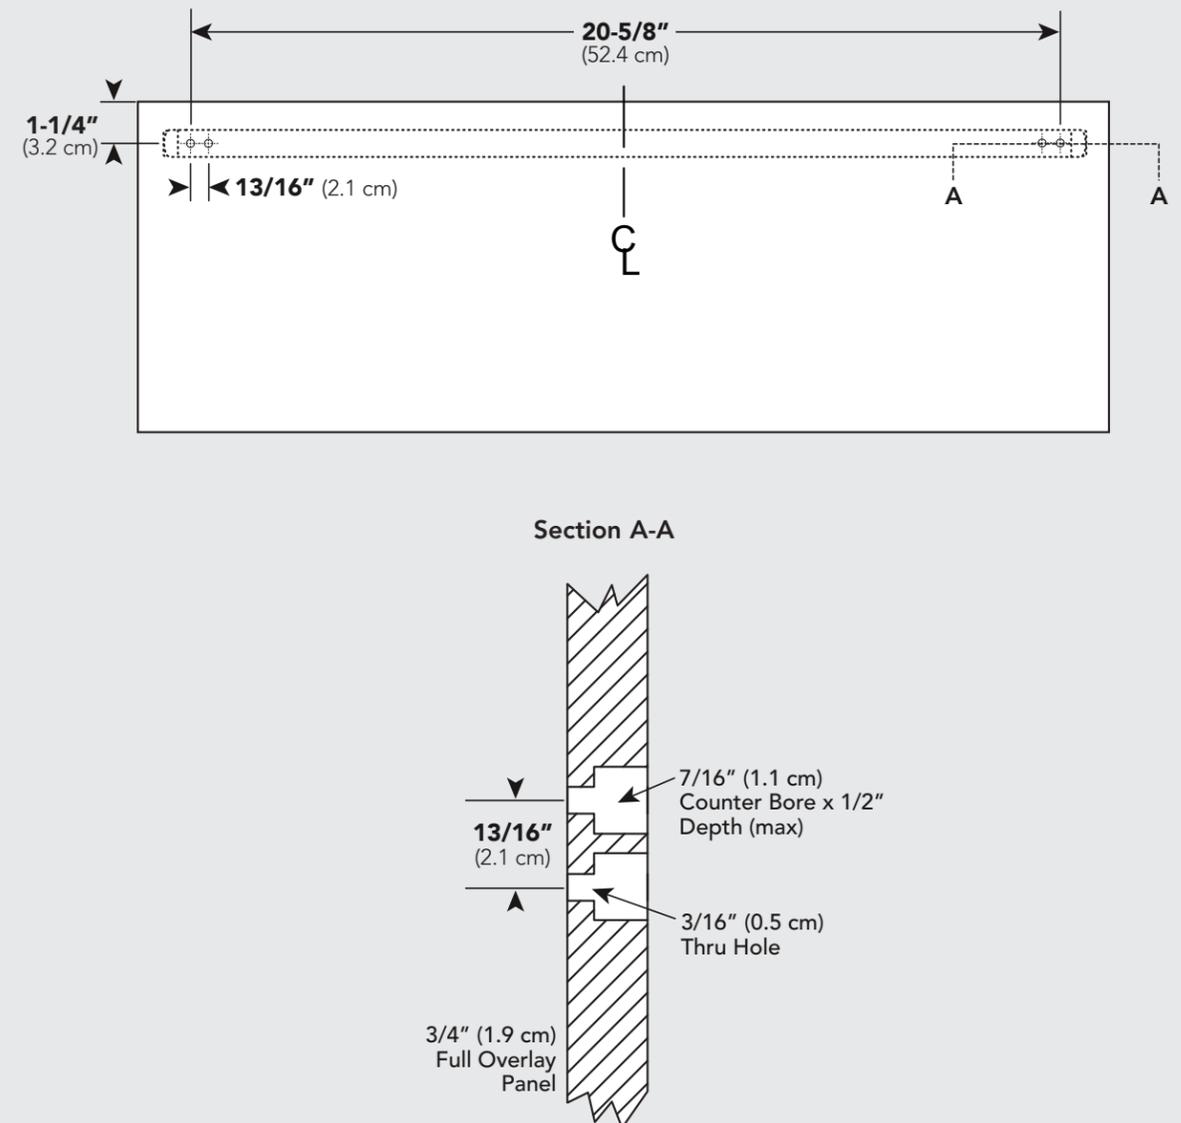

# Custom Front Installation

## CUSTOM FRONT INSTALLATION

1. Open the drawer and remove the pan.
2. Center the custom front on the inside panel.
3. Attach the custom front with the (6) six #8 x 3/4" screws provided.

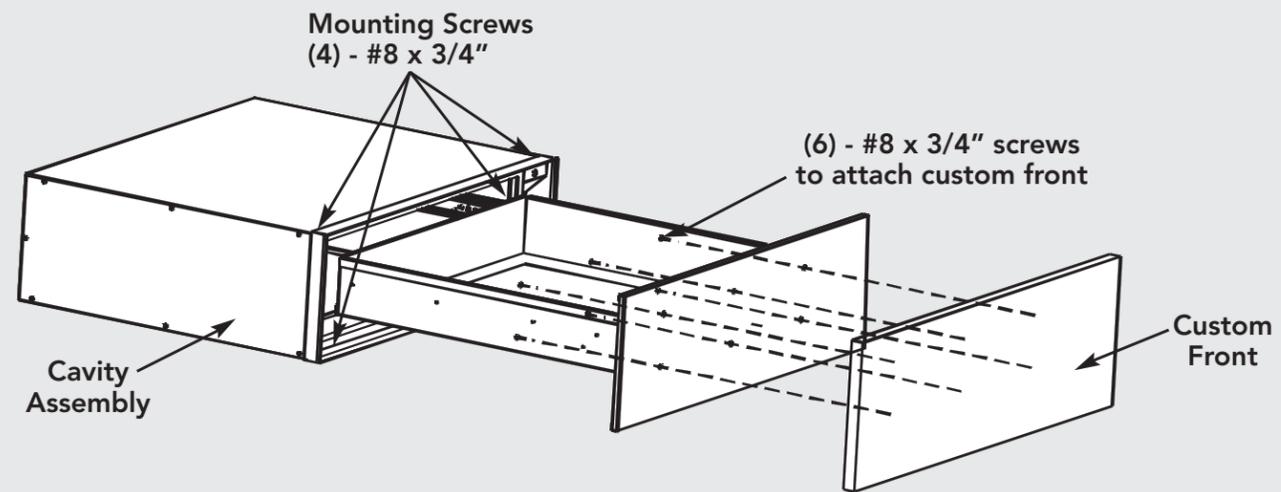

Specifications subject to change without notice.