

NOTE: This instruction sheet only refers to the PSSPL3 and DSSPL3 series side panel kits.

1) Align side panel support with top and bottom cabinet edges.

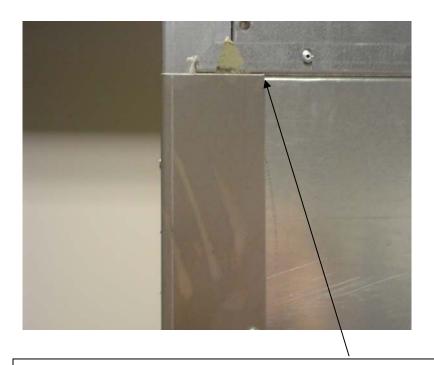


Side panel support aligned with top cabinet edge

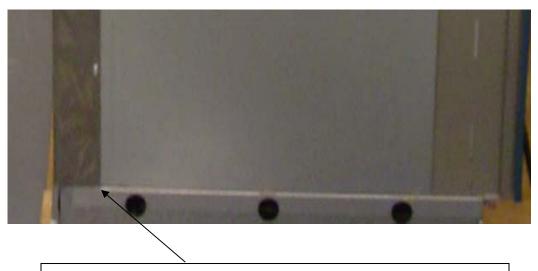


Side panel support aligned with bottom cabinet edge

NOTE: The Side Panel Support is manufactured to fit on the left rear corner of the unit. The Side Panel Support should be aligned with the rear of the unit.

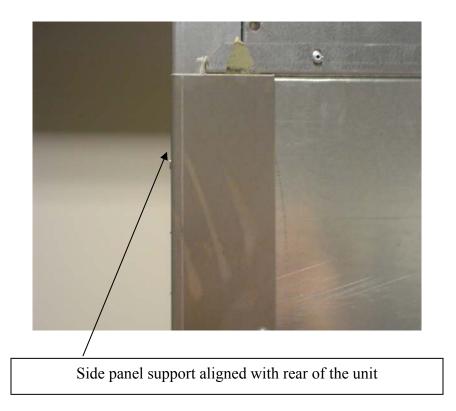

- 2) Using the side panel support holes as a template, drill (7) holes into the side of the unit with a 9/64" (.36 cm) diameter drill bit.
- 3) Attach side panel support to the unit with #8 sheet metal screws provided.

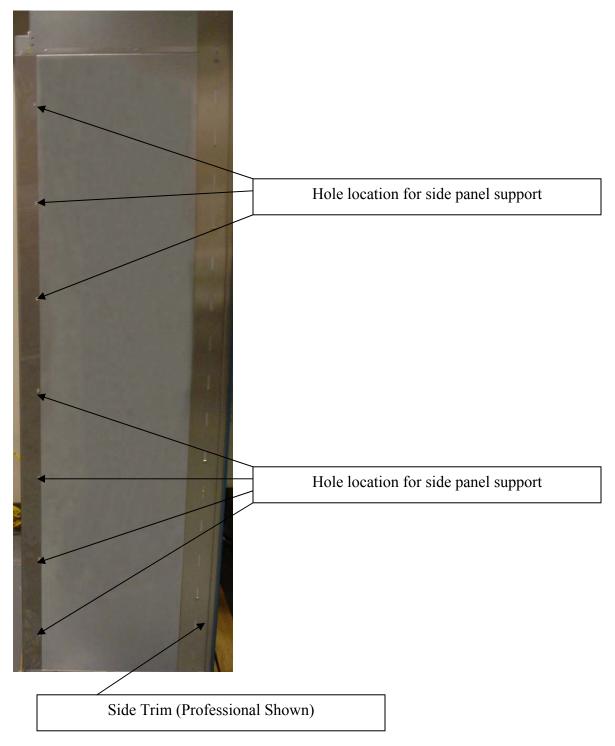

4) Position and engage side panel with the side trim toward the front of the unit. Position rear of side panel with the rear of the unit.



5) Attach rear of side panel into pre-drilled holes on side panel support.